



## Standard Test Method for Viscosity by Ford Viscosity Cup<sup>1</sup>

This standard is issued under the fixed designation D 1200; the number immediately following the designation indicates the year of original adoption or, in the case of revision, the year of last revision. A number in parentheses indicates the year of last reapproval. A superscript epsilon ( $\epsilon$ ) indicates an editorial change since the last revision or reapproval.

*This standard has been approved for use by agencies of the Department of Defense to replace Method 4282 of Federal Test Method Standard No. 141. Consult the DoD Index of Specifications and Standards for the specific year of issue which has been adopted by the Department of Defense.*

### 1. Scope

1.1 This test method covers the determination of the viscosity of Newtonian or near-Newtonian paints, varnishes, lacquers, and related liquid materials with the Ford-type efflux viscosity cup. If the material is non-Newtonian, that is, shear-thinning or thixotropic, Test Method D 2196 should be used.

1.2 *This standard does not purport to address all of the safety concerns, if any, associated with its use. It is the responsibility of the user of this standard to establish appropriate safety and health practices and determine the applicability of regulatory limitations prior to use.*

### 2. Referenced Documents

#### 2.1 ASTM Standards:

D 2196 Test Methods for Rheological Properties of Non-Newtonian Materials by Rotational (Brookfield) Viscometer<sup>2</sup>

E 1 Specification for ASTM Thermometers<sup>3</sup>

### 3. Terminology

#### 3.1 Definitions:

3.1.1 *Newtonian liquid*—a liquid in which the viscosity is independent of the shear stress or shear rate. If the ratio of shear stress to shear rate is not constant, the liquid is non-Newtonian.

3.1.2 *Near-Newtonian liquid*—a liquid in which the variation of viscosity with shear rate is small and the effect on viscosity of mechanical disturbances such as stirring is negligible.

### 4. Summary of Test Method

4.1 The Ford viscosity cup is filled level full with the liquid under test, and the time for the material to flow through one of the standard orifices is measured.

### 5. Significance and Use

5.1 This test method is useful for the determination of package and application viscosities of a number of paints

and other coatings and in the thinning of these materials, but is limited to Newtonian or near-Newtonian liquids.

5.2 There are other types of apparatus for measuring viscosity in the laboratory that produce more accurate results.

### 6. Apparatus

6.1 *Ford Viscosity Cups*—Nos. 1, 2, 3, 4, and 5 Ford viscosity cups made of corrosion- and solvent-resistant materials assembled as complete units (Note 1), and conforming to the dimensional requirements shown in Fig. 1. The orifice dimensions are considered as a guide only as the combination of cup and orifice dimensions must permit conformance to the flow formula for each cup as listed in the Appendix.

NOTE 1—If the orifice is removed from the cup for any reason the cup should be recalibrated before use as described in the Appendix.

6.2 *Thermometer*—Saybolt Viscosity Thermometer conforming to the requirements for Thermometer 17C (19 to 27°C) or 17F (66 to 80°F) as prescribed in Specification E 1.

6.3 *Timing Device*—Any timing device may be used providing that the readings can be taken with a discrimination of 0.2 s or better.

### 7. Test Specimen

7.1 The specimen of the material to be tested shall be visibly homogeneous and free of any foreign material or air bubbles.

### 8. Temperature of Testing

8.1 All measurements with the Ford viscosity cups shall be made at 77°F (25°C) or a temperature agreed upon between producer and user. Temperature drift during the test should be kept to a minimum and should not exceed  $\pm 0.4^\circ\text{F}$  ( $\pm 0.2^\circ\text{C}$ ).

NOTE 2—It is impossible to predict the effect of temperature change on each material with which the apparatus may be used. This factor may be less than 1 % per degree Celsius for some liquids whereas others may be as high as 8 to 10 % per degree Celsius.

### 9. Calibration

9.1 Cups should be calibrated in accordance with the procedure described in the Appendix. The frequency of this calibration check depends upon the amount of use and the care that the individual cup receives. If the cup varies more than 10 % from standard, it should not be used.

<sup>1</sup> This test method is under the jurisdiction of ASTM Committee D-1 on Paints and Related Coatings, Materials, and Applications and is the direct responsibility of Subcommittee D01.24 on Physical Properties of Liquid Paints and Paint Materials.

Current edition approved Aug. 15, 1994. Published October 1994. Originally published as D 1200 – 52 T. Last previous edition D 1200 – 88.

<sup>2</sup> *Annual Book of ASTM Standards*, Vol 06.01.

<sup>3</sup> *Annual Book of ASTM Standards*, Vol 14.03.

10. Conditioning

10.1 Bring the material to a temperature a few degrees below that desired and then agitate vigorously for 10 min on a reciprocating shaker in a pint can two-thirds full. Allow to stand undisturbed for 10 min while adjusting further to the desired temperature. Make the viscosity determination at the end of the 10-min period.

11. Procedure

11.1 Make viscosity determinations in a room free of drafts and rapid changes in temperature. For the highest degree of precision the room temperature should be between 72 and 82°F (22 and 28°C). Determinations should be made at a temperature above the dew point of the atmosphere surrounding the apparatus.

11.2 Choose the proper cup so that the time of efflux will be between 20 and 100 s (preferably between 30 and 100 s) for cup Nos. 3, 4, and 5; between 55 and 100 s for cup No. 1; and between 40 and 100 s for cup No. 2 (Fig. 2).

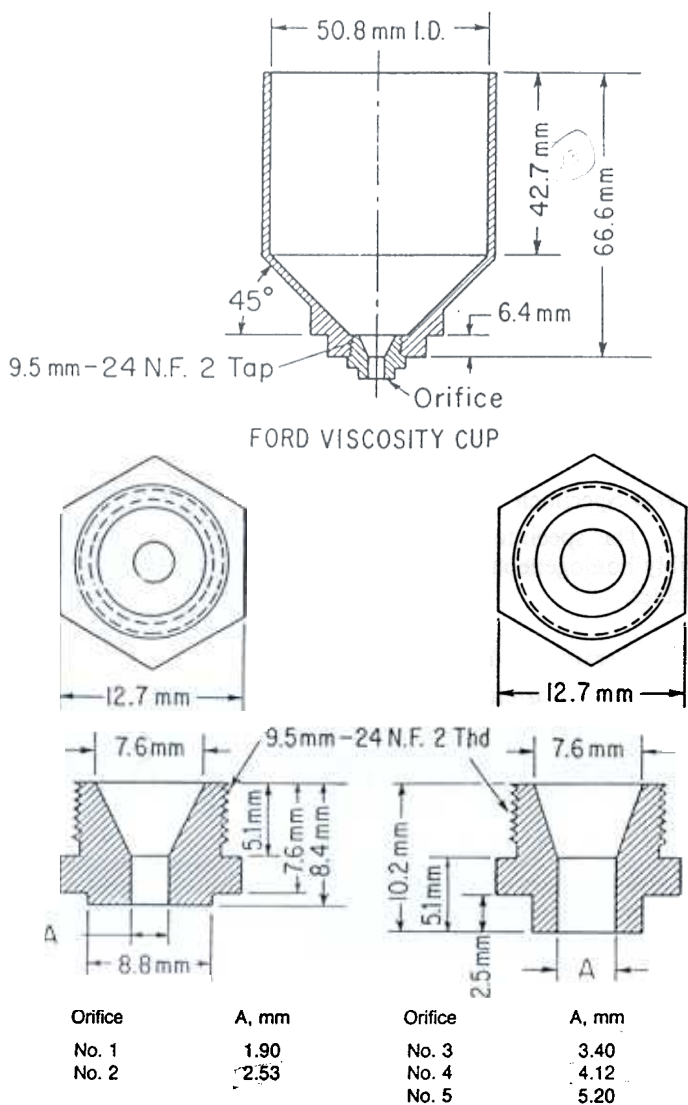


FIG. 1 Ford Viscosity Cup and Orifices

11.3 Level the instrument so that a cup may be filled level full without a meniscus or overflow at one side.

11.4 Determine the time in seconds of efflux as follows: Close the orifice, for example, by holding a rubber stopper against it. Fill the cup with the prepared specimen. The preferred method is to overfill the cup and scrape off the excess with a straightedge. Pull the stopper away and simultaneously start the timing device. Measure the time until the first break in the stream.

11.5 Measure the temperature of the fluid in the efflux stream.

11.6 If the cup has been established to be nonstandard when calibrated as described in the Appendix, apply the percent difference to the measured seconds to get the corrected viscosity in Ford-cup seconds.

12. Care of Cup

12.1 Following each determination, clean the cup by the use of a suitable solvent and a soft brush. Under no conditions should metal cleaning tools be brought into contact with the instrument. Particular care must be exercised in cleaning the orifice to avoid any film deposit or nicks on the inside walls.

13. Report

13.1 Report the following information:

13.1.1 The efflux time to the nearest 0.2 s for the cup orifice combination (for example, viscosity 33.2 s with No. 4 Ford cup), the temperature of the test specimen (as in the efflux stream), and the immediate history of agitation and rest prior to the measurement.

14. Precision and Bias

14.1 Precision—On the basis of an interlaboratory test of this test method in which eight cooperators from four different laboratories made measurements on five different paints, the within-laboratory coefficient of variation was found to be 2.8 % with 35 df and the between-laboratory coefficient of variation was found to be 6.9% with 30 df. Based on these coefficients, the following criteria should be used for judging the acceptability of results at the 95 % confidence level:

14.1.1 Repeatability—Two results obtained by the same

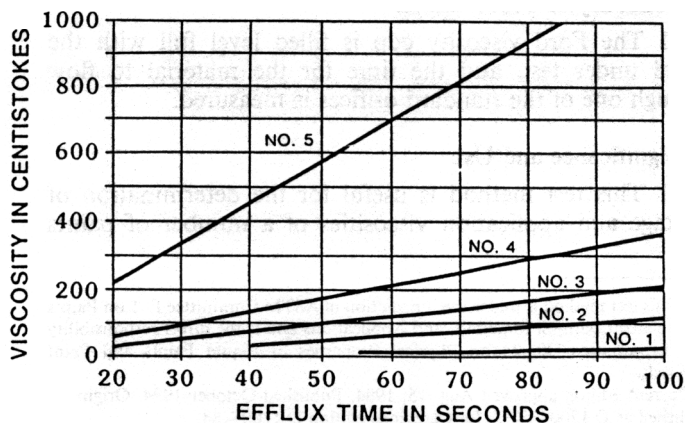


FIG. 2 Approximate Viscosity Curves for Ford Cups

operator on different days should be considered suspect if they differ by more than 8 %.

14.1.2 *Reproducibility*—Two results obtained by operators in different laboratories should be considered suspect if they differ by more than 20 %.

14.2 *Bias*—Since there is no accepted reference material

suitable for determining bias for the procedure in this test method, bias cannot be determined.

15. Keywords

15.1 flow cup; Ford cup; viscometers—Ford

APPENDIX

X1. Calibration Procedure for Ford Cups

X1.1 The orifice of the Ford cup is commonly made of brass or some other corrosion-resistant material which is subject to wear with use and cleaning. A small change in diameter of the orifice becomes significant in the results obtained with the use of this type of viscosity-measuring apparatus.

X1.2 The viscosity standards<sup>4</sup> are available only as 1-pt samples.

X1.3 Select the appropriate liquid viscosity standard for the cup to be calibrated (see Table X1.1). Bring this cup and the liquid viscosity standard to a constant temperature as close as possible to 77.0°F (25.0°C) or to the operating temperature of the cup. Determine the time of efflux to the nearest 0.2 s using the procedure detailed in Section 11. Keep the temperature drift to within ±0.4°F (±0.2°C). If the temperature is not 77°F, the actual temperature must be noted and the viscosity of the standard oil corrected to this temperature.

X1.4 The following formulas are used to convert the time of flow in seconds, *t*, to kinematic viscosity *V*:

$$\begin{aligned}
 V_1 &= 0.49 (t - 35.0) \\
 V_2 &= 1.44 (t - 18.0) \\
 V_3 &= 2.31 (t - 6.58) \\
 V_4 &= 3.85 (t - 4.49) \\
 V_5 &= 12.1 (t - 2.00)
 \end{aligned}$$

where *V*<sub>1</sub>, *V*<sub>2</sub>, *V*<sub>3</sub>, *V*<sub>4</sub>, and *V*<sub>5</sub> = kinematic viscosity using orifice No. 1, 2, 3, 4, and 5, respectively, cSt.

TABLE X1.1 Viscosity Standards Recommended for Calibrating Ford Viscosity Cups

Cup Number	Approximate Cup Viscosity Range, cSt	Standard Oil Designation	Approximate Designated Viscosity at 77°F (25°C), cSt <sup>4</sup>
1	10 to 35	S-10	20
2	25 to 120	S-20	35
3	49 to 220	S-60	120
4	70 to 370	S-60	120
5	200 to 1200	S-200	460

<sup>4</sup> Exact viscosities are supplied with the oil samples.

X1.5 The difference between the certified viscosity and the determined viscosity, multiplied by 100 and divided by the certified viscosity, will give the percent variation of the cup from standard. A percent correction can be applied to the seconds flow when the cup is in normal use. If the cup varies more than 10 % from standard, it is recommended that the orifice be replaced and that the cup be recalibrated.

<sup>4</sup> Certified kinematic viscosity standards are available from the Cannon Instrument Co., P.O. Box 16, State College, Pa. 16801. For particular oils applicable for use with the Ford Cups refer to Table X1.1. Oils available from other sources, having known kinematic viscosities, may also be used.

*The American Society for Testing and Materials takes no position respecting the validity of any patent rights asserted in connection with any item mentioned in this standard. Users of this standard are expressly advised that determination of the validity of any such patent rights, and the risk of infringement of such rights, are entirely their own responsibility.*

*This standard is subject to revision at any time by the responsible technical committee and must be reviewed every five years and if not revised, either reapproved or withdrawn. Your comments are invited either for revision of this standard or for additional standards and should be addressed to ASTM Headquarters. Your comments will receive careful consideration at a meeting of the responsible technical committee, which you may attend. If you feel that your comments have not received a fair hearing you should make your views known to the ASTM Committee on Standards, 1916 Race St., Philadelphia, PA 19103.*